

**CH** CHANNEL CONTROLLER

Move to previous track /  
Hold: Bank left  
SHIFT: Rewind

Zoom toggle  
SHIFT: stop

Volume fader /  
Flip: Send (A-E) fader

Automation off / read  
SHIFT: Cycle on/off

Flip faders  
SHIFT: switch edit mode

Automation touch /  
(trim) / latch / write  
SHIFT: metronome on/off

Open-close plug-in /  
double tap: next plug-in  
SHIFT: countoff on/off

Mute track / clear mute  
SHIFT: mute all tracks /  
clear all mutes

Solo track / clear solo  
SHIFT: solo all tracks /  
clear all solos

Move to next track /  
Hold: Bank right  
SHIFT: fast forward

Rotary knob controls  
pan or send level

Trackview waveform /  
volume  
SHIFT: play

Bypass plug-in  
SHIFT: rotary knob  
pan mode / L-R panner

Plug-in compare

Mute send A-E  
SHIFT: rotary knob  
send mode / Sel. A-E

Hold: extra functions /  
fine control fader and  
rotary knob

Track input monitor (not in LE)  
SHIFT: Fader catch/jump mode

Record enable track  
SHIFT: record enable  
all tracks



**FD** FADER CONTROLLER



Volume faders /  
Flip: sends (A-E) faders  
*SHIFT + tap upper zone:*  
mute track  
Flip: mute send  
*SHIFT + tap lower zone:*  
solo track

Hold: extra functions /  
fine control faders

Bank 4 or 8 channels left  
*SHIFT: Fader catch/jump mode*

Bank 4 or 8 channels right  
*SHIFT: switch between  
4 or 8 channels banking*

Nudge channels left  
*SHIFT: flip faders*

Nudge channels right  
*SHIFT: fader / level meter*



**TP** TRANSPORT CONTROLLER

- Move to previous track  
*SHIFT: open/close memory locations window*
- Insert marker / enter  
*SHIFT: switch edit mode*
- Center selection left side  
*SHIFT: add previous clip to selection*
- Rewind / grid step left  
*SHIFT: Nudge left*
- Hold: extra functions / fine control scrubbing
- Move to previous clip side  
*SHIFT: select previous clip*
- Cycle on / off  
*SHIFT: metronome on/off*
- Stop  
*SHIFT: abort recording*



- Move to next track  
*SHIFT: Countoff on/off*
- Link timeline and edit selection  
*SHIFT: open/close transport window*
- Fast forward / grid step right  
*SHIFT: Nudge right*
- Center selection right side  
*SHIFT: add next clip to selection*
- Move to next clip side  
*SHIFT: select next clip*
- Instant duplicate track  
*SHIFT: duplicate track dialog*
- Slider performs Scrub / Shuttle / Locate / Scroll / Zoom / Tap Tempo.  
Pinch to zoom in any mode  
*SHIFT: fine control Scrubbing / tap to switch Locate Mode*
- Hold + tap slider zone: switch slider mode
- Play  
*SHIFT: play edit selection*
- Record  
*SHIFT: normal / loop / destructive / quickpunch*



QC QUICK CONTROLLER

Rotary knobs control  
panners / sends /  
plug-in / MIDI Control

**Plug-in mode** open/close  
plug-in window. Hold to  
switch to next plug-in  
*SHIFT: Plug-in switch #3*

**Pan mode** / L-R panner  
*SHIFT: Send panner mode/  
Plug-in switch #1*

**MIDI Mode**  
*SHIFT: Plug-in switch #4*

**Send Mode** / send A-E (*sends A*)  
*SHIFT: Plug-in switch #2*

**Stop** (*sends D*)  
*SHIFT: Cycle on/off*

**Rewind** (*sends B*)  
*SHIFT: Nudge left*

**Play** (*sends E*)  
*SHIFT: Record*

**Fast Forward** (*sends C*)  
*SHIFT: Nudge right*

SHIFT

**Automation off / read**  
*SHIFT: Bypass plug-in*

**Move to previous track /**  
Hold: Bank left

**Automation touch /**  
(trim) / latch / write  
*SHIFT: plug-in compare*

**Move to next track /**  
Hold: Bank right  
*SHIFT: Toggle plug-in  
knob mode*

steinberg

AI AI CONTROLLER

Double-tap: save project

Undo

Parameter control mode /  
scroll direction up / down

Zoom mode

Rotary knob performs  
parameter control /  
zoom / JOG

Edit / mix window

Switch edit tool

JOG mode /  
Switch between "grid"  
or "regions" jogging

steinberg

